




$Y = B - 2\text{ mm}$
 $Z = B + 4\text{ mm}$

B = Boden- / Rückwandbreite (siehe Montageanleitung SysTech)
B = bottem / rear panel width (see fitting instruction SysTech)

Beispiel / example:

EB (X = 13 mm / X = 22 mm)	Y ± 0,5	Z ± 0,5	B ± 0,5
762 / 780	687,5 mm	693,5 mm	689,5 mm

Beistellcontainer / wide container	Quadro Duplex	SysTech
	X = 6 X = 9,5	B = EB - 58,5 mm B = EB - 65,5 mm
Schrankwand / wall-to-wall unit	X = 13 X = 22	B = EB - 72,5 mm B = EB - 90,5 mm

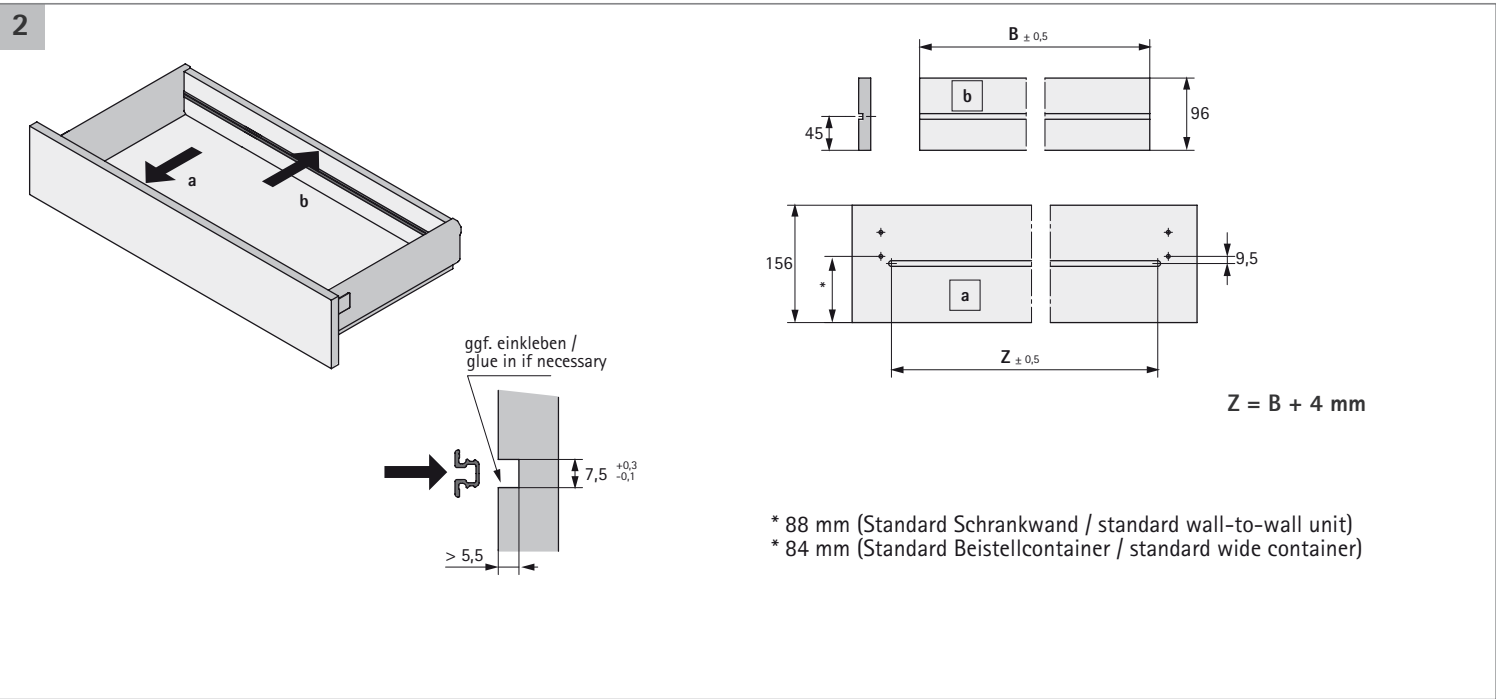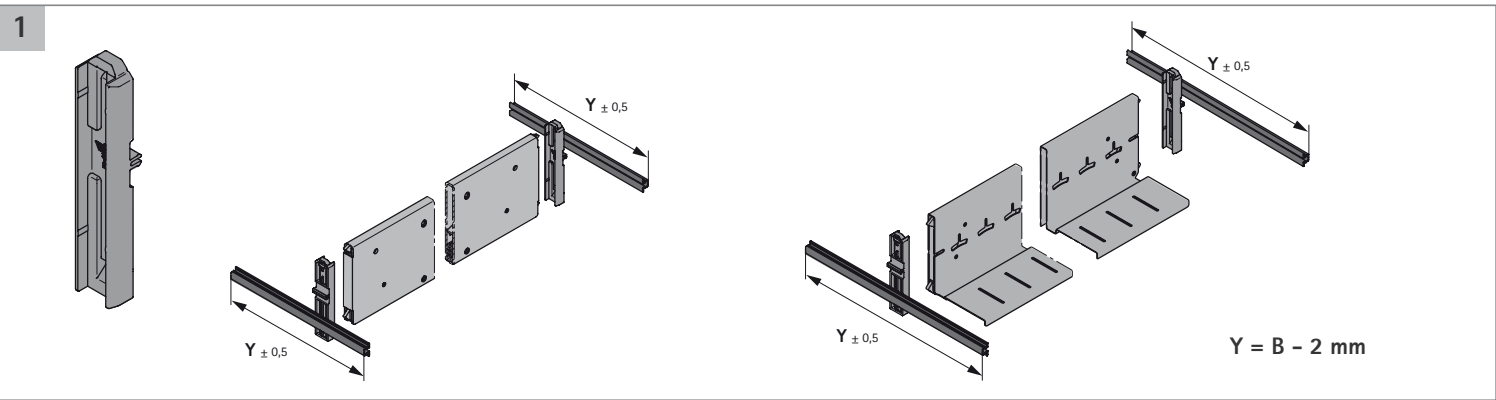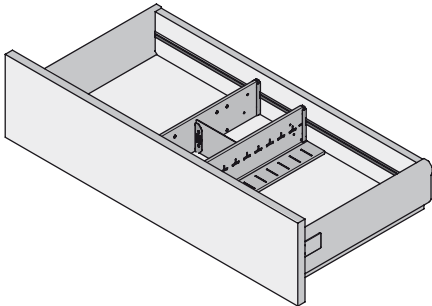

* 88 mm (Standard Schrankwand / standard wall-to-wall unit)
* 84 mm (Standard Beistellcontainer / standard wide container)