

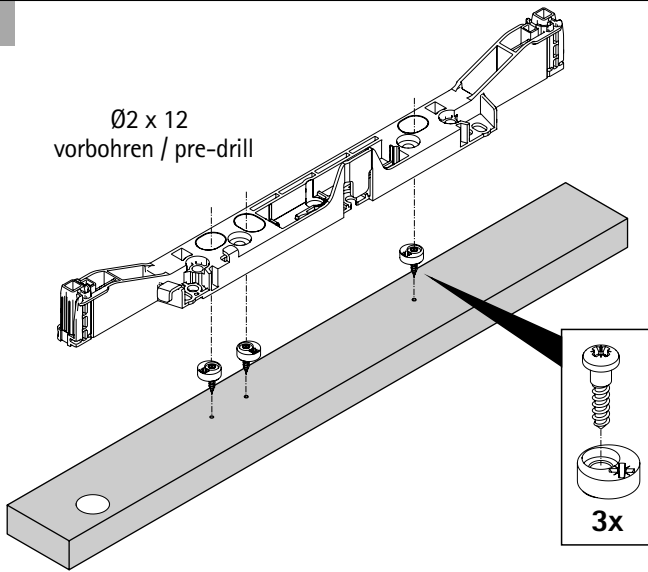


1

Ø2 x 12
vorbohren / pre-drill

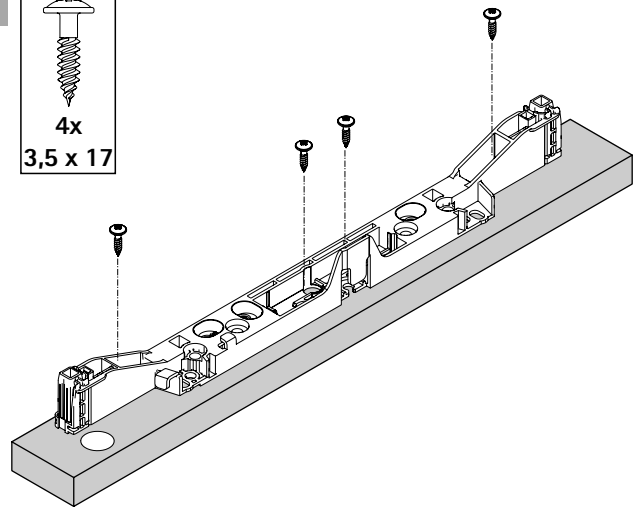

2



2D-Verstellung / 2D-adjustment

1.

Schrauben 1/2-Umdrehung lösen
Loosen screws by 1/2 turn

2.

